




How To Measure For You PCA Aluminum Screen Door

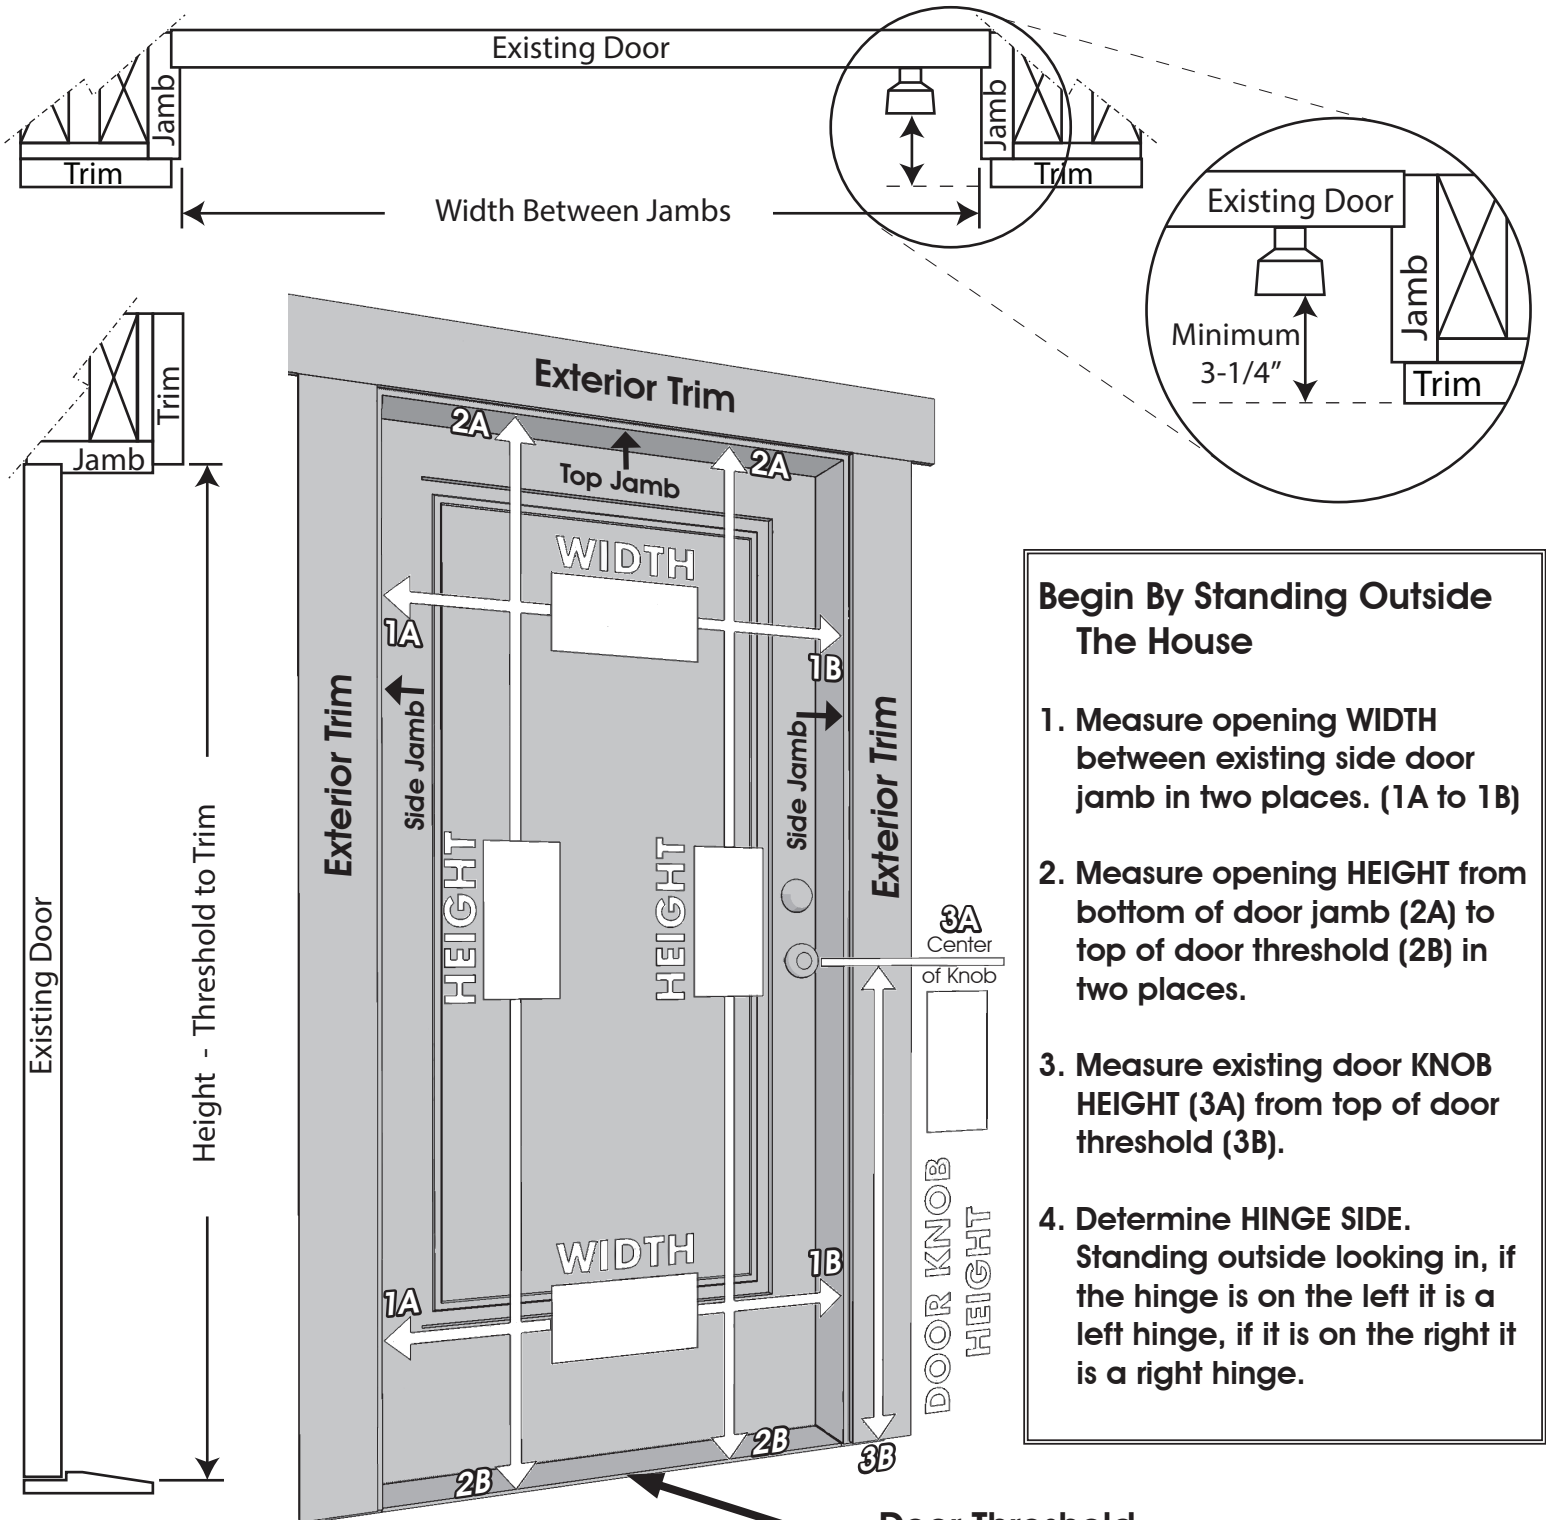

- Begin By Standing Outside The House**
1. Measure opening **WIDTH** between existing side door jamb in two places. (1A to 1B)
 2. Measure opening **HEIGHT** from bottom of door jamb (2A) to top of door threshold (2B) in two places.
 3. Measure existing door **KNOB HEIGHT** (3A) from top of door threshold (3B).
 4. Determine **HINGE SIDE**. Standing outside looking in, if the hinge is on the left it is a left hinge, if it is on the right it is a right hinge.

Door Threshold
When measuring from the threshold, always measure at the front edge.

4
I Want My Hinge On The:

← Left Right →